

PROSEP FILTER SYSTEMS LTD

TAP INSTALLATION INSTRUCTIONS

Installing the Tap


Alternative tap sizes and colours are available from stock, please call 01422 377367 for details.

1. Select a suitable position on the worktop or corner of the sink.
2. Before drilling the hole, check there is nothing directly underneath that could be damaged i.e. Water or waste pipes, cables etc. Also make sure that there is room for the locating washer and that you can physically reach the tap stud to connect the brass nut.
3. Use a centre punch to mark the location of the hole to be drilled.
4. Drill a 3mm pilot hole. Enlarge the hole to 11mm.

Please note:

If you are drilling through stainless steel, deburr any rough edges around the hole. Wipe clean with a soft cloth.

5. Check that the tap stud fits easily through the hole.
6. Secure the tap as shown in the illustration.
7. Firmly push the open end of the blue pipe into the grey collar within the push-fit connector on the side of the filter housing marked 'OUT'.
8. Check for leaks and tighten as necessary.

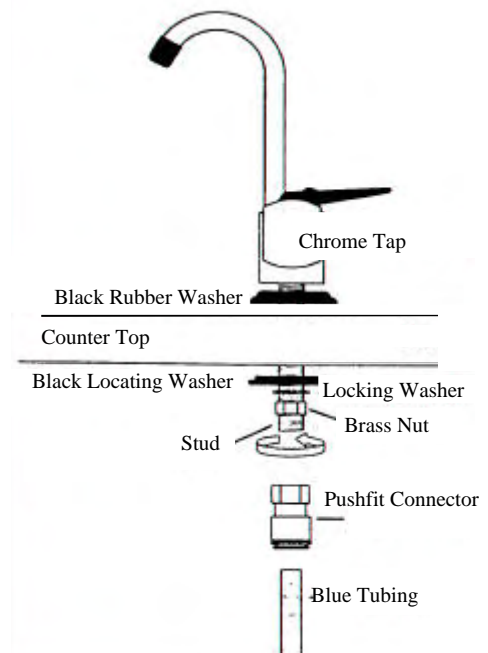

UNIT G19, RIVER BANK WAY, LOWFIELDS BUSINESS PARK,
ELLAND, WEST YORKSHIRE HX5 9DN
TEL: 01422 377367 FAX: 01422 377369
Email: sales@prosep.co.uk Web: www.prosep.co.uk