

BEVPOR PS Cider

Filter Cartridges



BEVPOR PS cider filters protect the unique characteristics of cider by removing yeast and other spoilage organisms to ensure microbial stability during cold stabilization.

The inert and highly asymmetric PES membrane provides validated microbial retention to typical spoilage organisms, whilst protecting the cider's organoleptic qualities to preserve a fresh taste and a long shelf-life once packaged. Combined with hydrophilic properties for easy integrity testing, BEVPOR PS filters provide assured performance throughout their service life.

BEVPOR PS filters have been designed to provide a cost-effective solution to cider stabilization by providing increased process control with increased operational efficiency.


Features

- Validated retention to spoilage organisms
- Inert material of construction
- Easily integrity tested in-situ


Benefits

- Ensures effective microbial stabilization of cider
- Preserves the organoleptic qualities of the cider
- Assured filtration performance

Performance Characteristics

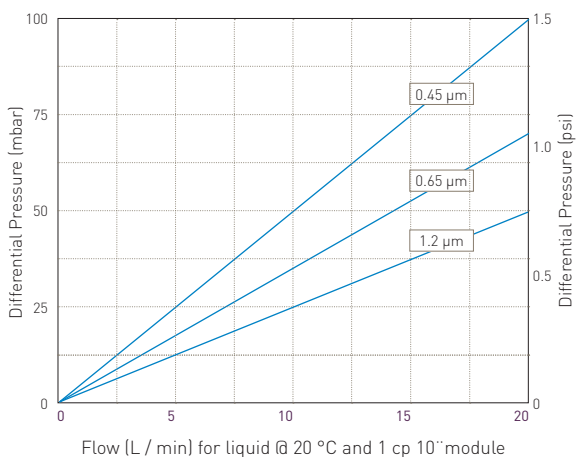

Filtration Stage

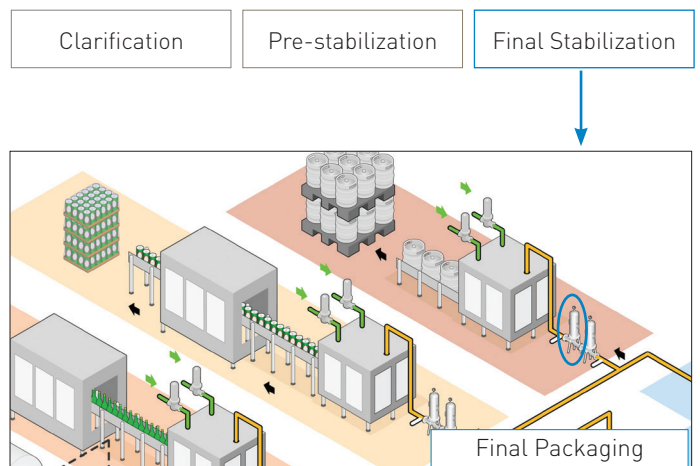

Specifications

Materials of Construction

Filtration Membrane:	Polyethersulphone
Upstream Support:	Polyester
Downstream Support:	Polyester
Inner Support Core:	Polypropylene
Outer Protection Cage:	Polypropylene
End Caps:	Nylon
End Cap Insert:	316L Stainless Steel
O-rings:	Silicone / EPDM

Food Contact Compliance

Materials conform to the relevant requirements of FDA 21 CFR Part 177, current EC1935 / 2004 and current USP Plastics Class VI - 121 °C.



Recommended Operating Conditions

Up to 70 °C (158 °F) continuous operating temperature and higher short-term temperatures during CIP to the following limits:

Temperature		Max Forward dP	
°C	°F	[bar]	[psil]
20	68	5.0	72.5
40	104	4.0	58.0
60	140	3.0	43.5
80	176	2.0	29.0
90	194	1.0	14.5
>100 (steam)	>212 (steam)	0.3	4.0

Effective Filtration Area (EFA)

10" (250 mm) Up to 0.6 m² (6.45 ft²)

Cleaning and Sterilization

BEVPOR PS cartridges can be repeatedly steam sterilized in-situ or autoclaved at up to 130 °C (266 °F). They can be sanitized with hot water at up to 90 °C (194 °F) and are compatible with a wide range of chemicals. Please refer to our Clean-in-Place support guide or contact your local Parker representative for more information.

Retention Characteristics

The retention characteristics of BEVPOR PS filters have been validated by challenges performed with the following organisms.

Organism	LRV when challenged with a minimum of 10 ⁷ cfu per cm ²		
	0.45	0.65	1.2
<i>Saccharomyces cerevisiae</i>	FR	FR	FR
<i>Brettanomyces bruxellensis</i>	FR	FR	FR
<i>Lactobacillus brevis</i>	FR	FR	-
<i>Acetobacter oeni</i>	FR	FR	-
<i>Pseudomonas aeruginosa</i>	9.1	8.9	-
<i>Serratia marcescens</i>	FR	FR	-

*FR - Fully retentive during challenge

When expressed as titre reduction "FR" equates to >10⁶ per 10" module.

Integrity Test Data

All filters are flushed with pharmaceutical grade purified water prior to despatch. They are integrity tested to the following limits:

Diffusional Flow Test Parameters	Micron Rating		
	0.45	0.65	1.2
Test Pressure (barg)	1.4	1.0	0.6
Test Pressure (psig)	20.0	15.0	5.7
Max Diffusional Flow per 10" (ml/min)	16.0	16.0	16.0

Manufacturing Traceability

Each filter cartridge displays the product name, product code and lot number. Additionally, each module displays a unique serial number providing full manufacturing traceability.

Ordering information

BPS	-		-		A		
Code	Length (Nominal)	Code	Micron	Code	End Cap (10 inch)	Code	O-rings
1	10" (250 mm)	04	0.45 µm	C	Fin / 226 Bayonet	S	Silicone
2	20" (500 mm)	06	0.65 µm	D	Fin / 222	E	EPDM
3	30" (750 mm)	12	1.20 µm	E	Flat Top / 222		
4	40" (1000 mm)			G	Recess / 222		
				R	BF / 222 Bayonet		

VSH & HSL
HOUSING RANGE
AVAILABLE

PROSEP FILTER SYSTEMS LTD
Unit G19
River Bank Way
Lowfields Business Park
Elland
West Yorkshire
HX5 9DN


Tel: 01422 377367

Fax: 01422 377369

Email: enquiries@prosep.co.uk

www.prosep.co.uk

Map and Directions to Prosep Filters Limited

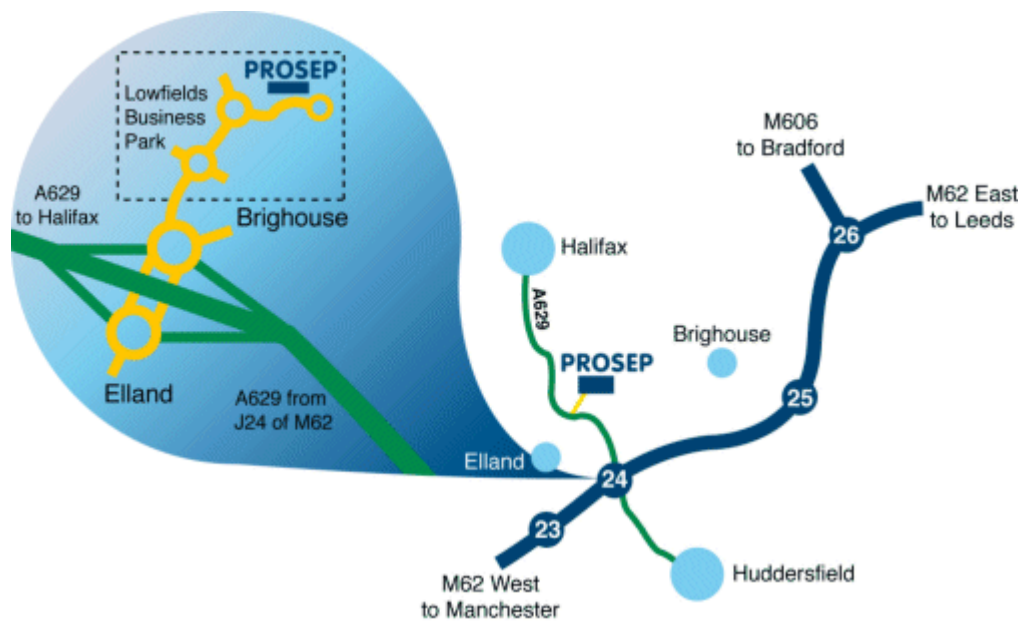

Leave M62 at Junction 24.

At roundabout adjacent to Cedar Court Hotel take 2nd exit onto dual carriageway (A629), signposted Halifax.

Take 1st exit slip road.

At roundabout at end of sliproad, take 3rd exit off.

This is the entrance to Lowfields Business Park.

Proceed straight over 1st roundabout.

At next roundabout take 2nd exit onto River Bank Way - Prosep Filters can be found on the left after the S-bend.

[Link to Google Maps](#)